

RocketStor 6674T

 
Thunderbolt™ 16-Bay SATA RAID
Storage Enclosure

Quick Installation Guide
V1.0.0

Kit Content

- 1x 16-Bay Enclosure
- 16x Drive Trays
- 1x Thunderbolt™ 40Gb/s Cable
- 2x UL Power Cord
- 64x 3.5" HDD Mounting Screws
- 64x 2.5" SSD Mounting Screws
- 1x Quick Installation Guide

Panel Layout-Front View

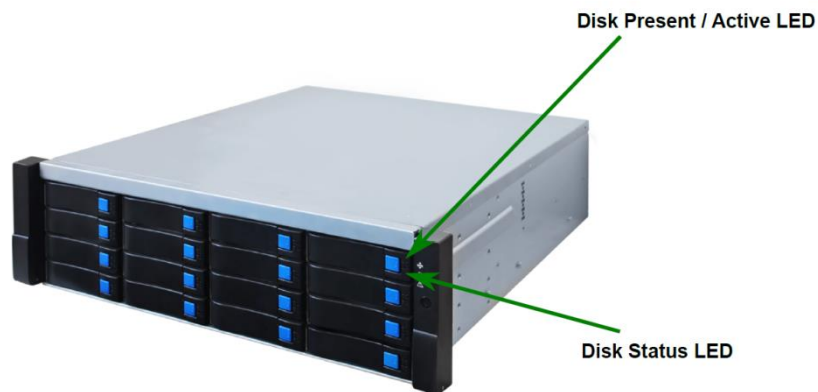


LED Indicators

- Disk Present: Solid blue LED
- Active LED: Flashing blue LED
- Disk Status LED
 - Solid red LED if disk failure
 - Flashing red LED if identifying/rebuilding



- Fan LED: Red LED when internal fan fails
- Power LED: Solid blue LED when enclosure is powered on
- Temperature LED: Red LED when enclosure temperature is over 50°C
- Mute Button: Mutes alarm when pressed

 Panel Layout-Rear View

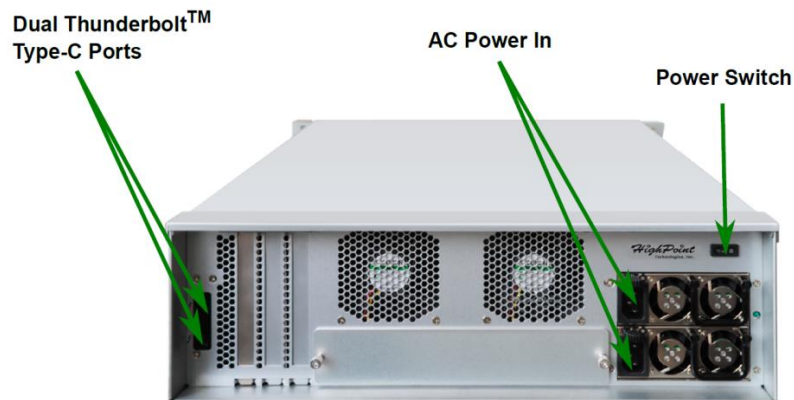


System Requirements


- System with a USB-C port (Thunderbolt™ 3)
- Mac OS X 10.10 and later
- Windows 8 and later

Enclosure Setup

 1. If using 3.5" HDDs, use the 3.5" mounting screws to connect the HDDs to the tray in the locations shown below

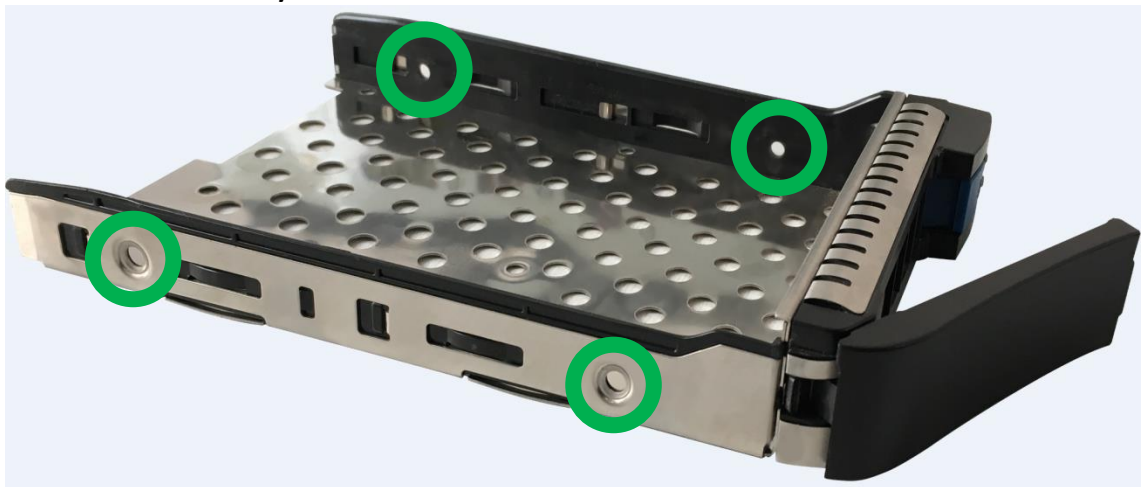


2. If using 2.5" SSDs, please use the 2.5" mounting screws to connect the SSDs to the tray in the locations shown below

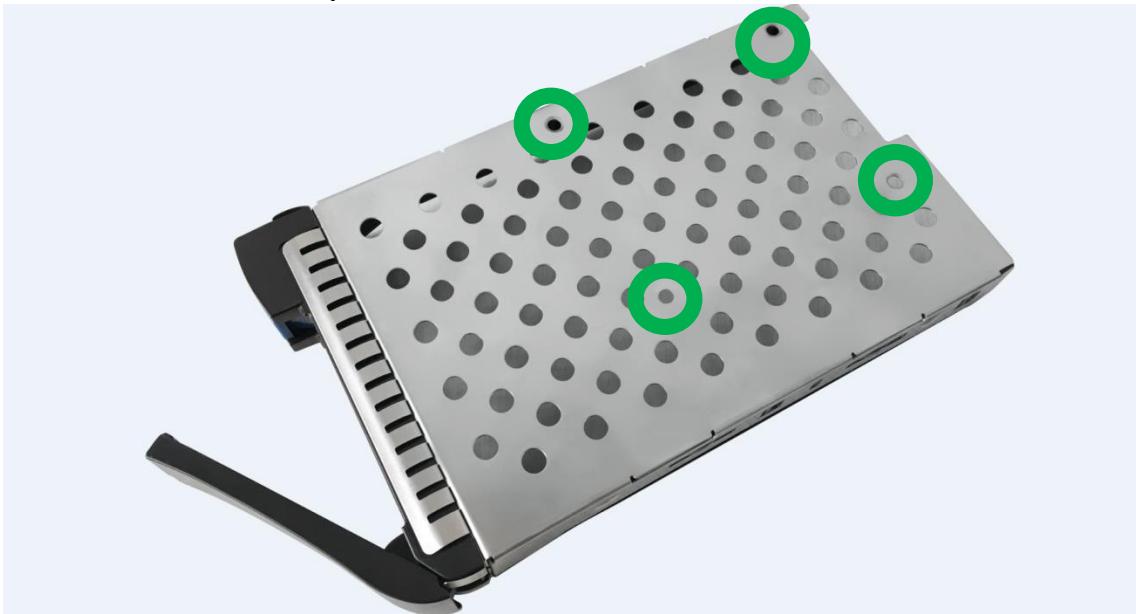


3. Connect the RocketStor 6674T to the host system with the Thunderbolt™ cable, and then connect the RocketStor 6674T to both power receptacles
4. With the power cord connected to the power source, turn on the RocketStor 6674T using the power switch on ("I" position) on the rear panel

Setting up the RocketStor 6674T (Mac)

1. Go to http://www.highpoint-tech.com/USA_new/series-rs6674t-download.htm to download and extract both folders from the Mac Software Package
2. Mount and enter the **RSWebGUI_Mac** folder and run the installation file
3. Mount and enter the driver folder and run the **HighPointRR.pkg** installation file

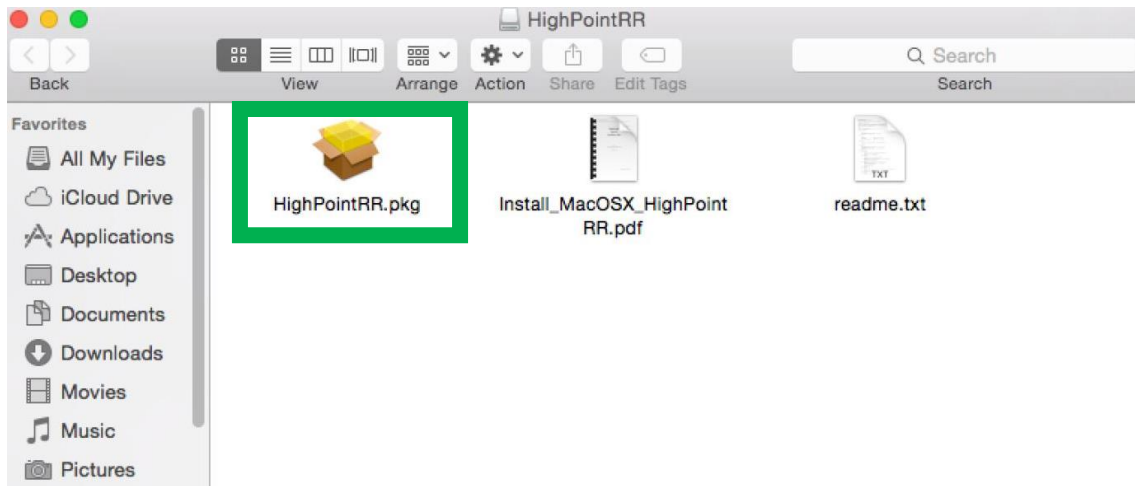

 
4. After installation, restart your computer
5. Select the **Apple** logo in the top left of the screen and select **About this Mac**. Then, select the **System Report** button.
6. Select the **PCI** tab on the left and double check the RocketRAID 840A SATA Controller is detected to ensure the driver is installed

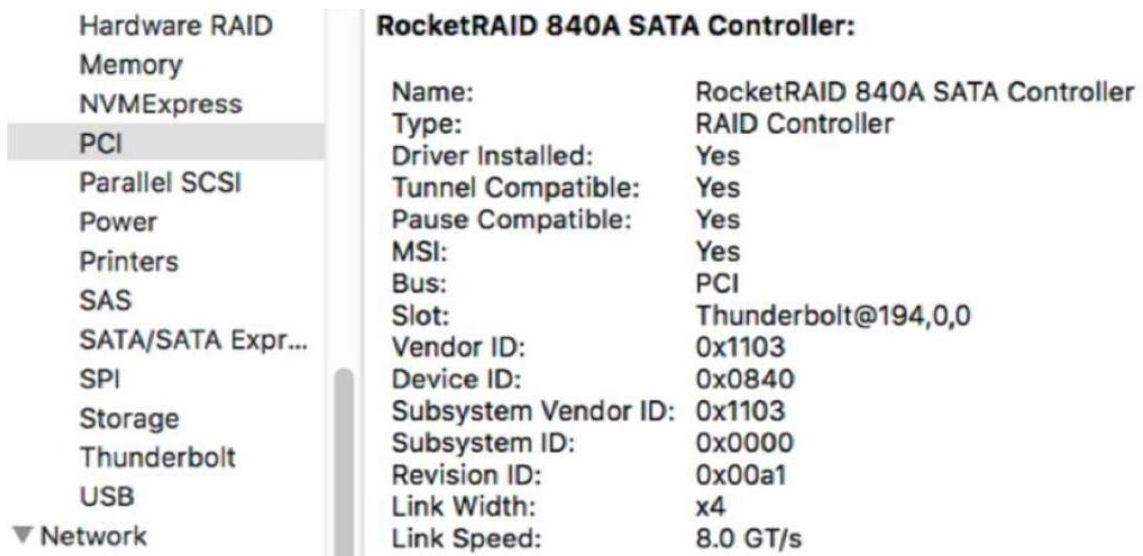


Setting up the RocketStor 6674T (Windows)

1. Go to http://www.highpoint-tech.com/USA_new/series-rs6674t-download.htm to download and extract both folders from the Windows Software Package

2. Enter the **RocketStor_Manager_Win** folder and run the **HighPointRocketStor Management.exe** file to install the HighPointRocketStor Manager, which allows you to analyze the RAID array
3. Enter the Windows driver folder and run the **setup.exe** application

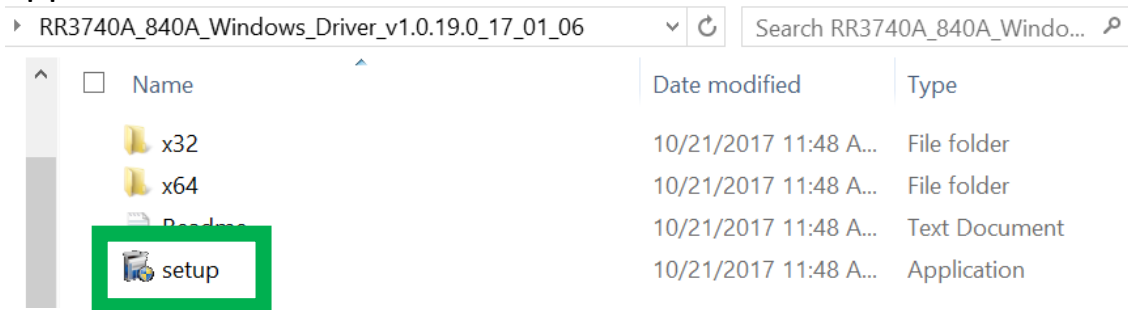

4. After installation, restart your computer
5. To double check the installation, first right click on the **Windows start logo** and select **Device Manager**
6. Then, under **Storage Controllers**, make sure RocketRAID 840A SATA Controller is present

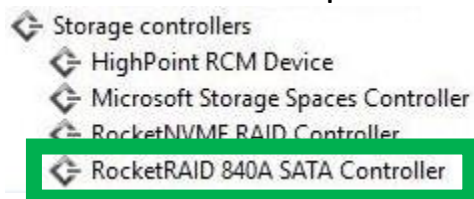

Customer Support

If you encounter any problems with the RocketStor 6674T or have any questions regarding this or any other HighPoint Technologies, Inc. product, feel free to contact our Customer Support Department

Web Support:

<http://www.highpoint-tech.com/websupport>

HighPoint Technologies, Inc. Website

<http://www.highpoint-tech.com>

© Copyright 2017 HighPoint Technologies, Inc. All rights reserved.