


2D BARCODE READER

Setup Manual

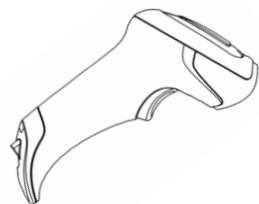

(* indicates factory default)

restore factory settings 	serial output 	*USB PC keyboard 	USB virtual COM port
version info 	enable all codes 	disable all codes 	*enable default codes
buzzer-low 	*buzzer-mid 	buzzer-high 	
enable silence 	*disable silence 	enable code ID 	*disable code ID
disable tail 	*add tail CR 	add tail TAB 	add tail CRLF
baud rate 1200bps 	baud rate 4800bps 	*baud rate 9600bps 	baud rate 14400bps
baud rate 19200bps 	baud rate 38400bps 	baud rate 57600bps 	baud rate 115200bps

*manual mode 	continuous mode 	inductive mode 	
continuous mode single read time			
1000ms 	3000ms 	* 5000ms 	infinite
continuous mode read interval time			
no interval 	500ms 	*1000ms 	1500ms
2000ms 	delay reading same code 	*no delay reading same code 	
inductive mode single read time			
1000ms 	3000ms 	* 5000ms 	infinite
inductive mode read interval time			
no interval 	500ms 	*1000ms 	1500ms
2000ms 			

*keyboard-USA 	keyboard-Czech 	keyboard-France 	keyboard-Germany
keyboard-Hungry 	keyboard-Italy 	keyboard-Japan 	keyboard-Spain
*normal sensitivity 	low sensitivity 	high sensitivity 	extreme sensitivity
lighting			
*normal 	always on 	no lighting 	
aiming			
*normal 	always on 	no aiming 	
input data coding format			
*GBK 	UNICODE 	AUTO 	UTF8
output data coding format			
*GBK 	UNICODE 	BIG5 	UTF8