

## 10. Software Upgrade

This model adopts flash drive (USB) upgrading method for software upgrade. Please copy the upgrading file into the flash drive, and insert the flash drive into the USB port at the back of machine. Hold on pressing the START key, and then turn on the power switch, you will find the choosing interface as follows:



Fig.48



Fig.49

**\*If the USB flash drive is inserted well, the display will show "USB is Ready!", otherwise it will show "Please insert the U-Disk!".**

For the upgrading file, it is not allowed to change its name and format, otherwise will cause upgrade failure.

### 10.1 MAINBOARD upgrading

Under interface Fig.48, press  or  key to choose "1.MAINBOARD", and then press ENTER key to start software upgrading, shown as Fig.50. If there is no software file or file name is not correct, it will display warning messages shown as Fig.51.

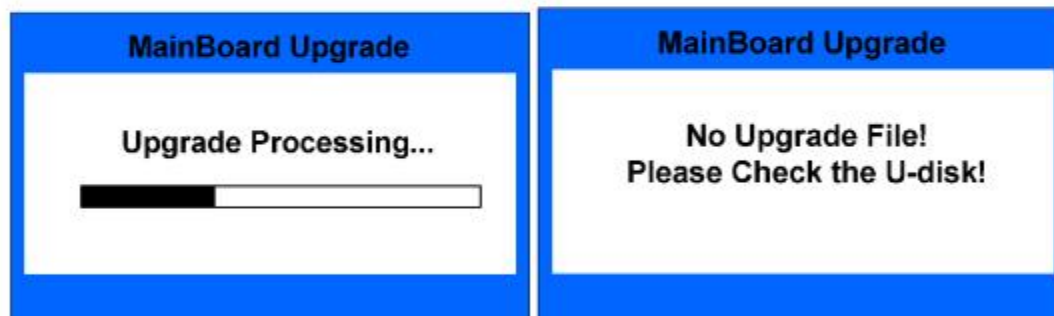


Fig.50 Fig.51-A



Fig.51-B

After software upgrade, please restart the machine referring to the following message.



Fig.52

## 10.2 IMAGEBOARD upgrading



Under interface Fig.48, press  or  key to choose "1. IMG BOARD" and then press ENTER to start software upgrading, shown as Fig.53. If there is no software file or file name is not correct, it will display warning messages shown as Fig.51-B.



Fig.53



Fig.54

After software upgrade, please restart the machine referring to the following message.



Fig.55