

# BC40 SOFTWARE UPGRADE SOP

## 1. copy the software to usb2.0 memory stick

Plug in an usb2.0 stick (plz don't use usb3.0) to PC, create a new folder named "gin" in root directory. Copy upgrade software "BC40\_\*\*\*\*\*GLImage.GIN" into this folder



## 2. Software upgrade on machine

1) Turn off power & plug in USB to machine



2) Turn power on, software be recognized and upgrade starts automatically:



3) After upgrade finished, machine will do self-check, then back to main counting interface & the upgrade done

