

BST-DL08

Single-Use USB PDF Temperature
DataLogger

Manual
V1.0

Content

Chapter I: Product introduction	1
1.1 Product introduction	1
1.2 Application	1
1.3 Product Feature	1
1.4 Performance Parameters	1
Chapter II: Instruction Manua	2
2.1 Instrument appearance specification	2
2.2 Instrument instructions	3
2.3 PDF document description	5
Chapter III: Precautions	8

Chapter I Product Introduction

1.1 Product Introduction

This product carries a new type of microcontroller, one-time record. Ability to generate PDF documents on their own, the user can access a variety of devices, easy and quickly browse recorded temperature data. Instrument equipped with a small LCD display, display temperature, user-friendly browsing to real-time temperature information, display data can be accurate to one decimal places, and eye-catching battery tips, always remind the electricity situation. At the same time, through the key switch, the user can get other information they need, including: the maximum recorded, minimum recorded, upper and lower limits of temperature. In addition it has a user-friendly mounting bracket can be fixed screws, installation more convenient and safe.

1.2 Application

The product can be applied to cold storage, vaccines and blood products, food cold chain transportation, containers transportation, outdoor and other special environment.

1.3 Product Feature

- IP67 waterproof and dustproof design, resistant to moisture, condensation and dust
- Low-power design, 1 / 2AA 3.6V lithium battery can work continuously for 12 months or more
- Comes with operating software, multiple data protection mechanisms to ensure that data is never lost
- high sensitivity probe, fast response, high precision
- maximum to record 12000 temperature data
- Instrument will connected with the computer to automatically generate PDF documents to view the analysis data more convenient and quick

1.4 Performance Parameters

Parameter	Parameter index	Parameter	Parameter index
Voltage	1/2AA3.6V Lithium battery	Measuring temperature range	-30~70 °C

Working temperature	-30~70°C	Measuring temperature accuracy	±0.5 °C
Size	125*28*22mm	Interval logging	10s
Weight	62g	Measuring area	About 50 m ²

Chapter II Instruction Manual

2.1 Instrument appearance instructions

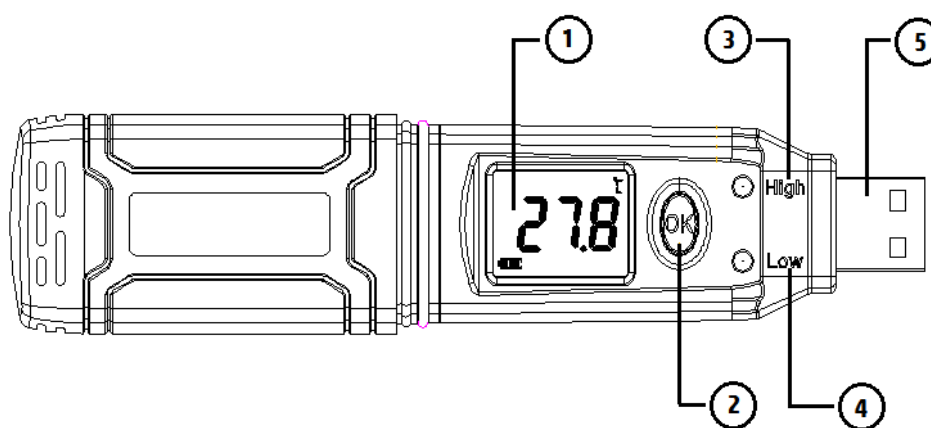


Figure 2-1 Front appearance diagram

1 - LCD display

2 - OK button : Instrument shutdown state, connected to PC set synchronize and time, long press this button for 3 seconds, the instrument boot and automatically enter the calibration mode, press this button again equipment shut down, turned off after press this button switch on the instrument into the recording mode.

When the instrument is turned on, press (short press) this button, the LCD will switch the display (real-time data, minimum value MIN, maximum value MAX, alarm lower limit LO, alarm upper limit HI cycle switching).

Instrument boot record state, long press this button for 3 seconds, the instrument off..

3 - upper limit lamp : the temperature exceeds the upper limit state, the light is on every 10 seconds, indicating the measured temperature exceeds the upper limit.

4 - lower limit lamp : the temperature exceeds the lower limit state, the light is on every 10 seconds once, indicating the measured temperature exceeds the lower limit.

5 - **USB interface** : for the instrument access to the computer.

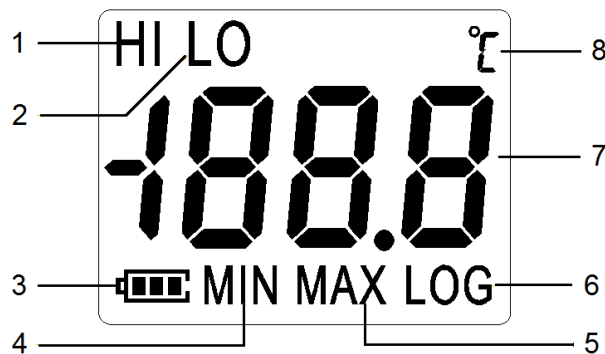


Figure 2-2 LCD display diagram

1 - Set upper temperature mark: meaning the instrument displays the set temperature upper limit.

2 - Set lower temperature mark: meaning the instrument displays the set temperature lower limit.

3 - Battery Level : Full grid is 3 grid

4 - Min temperature mark: indicating that the instrument shows the minimum temperature of the recorded temperature at this time.

5 - Max temperature mark: indicating that the instrument shows the maximum temperature of the recorded temperature at this time.

6 - Recording mark: meaning the instrument is recording data now.

7 - Real-time temperature

8 - Temperature units: °C and °F can be switched display

2.2 Instrument instructions

Use Step : set the instrument and synchronize the time → instrument turn on and boot into calibration mode → the instrument turn on again, and recording data normally → connect to the computer, open the PDF view and save data → end use.

1. Set the instrument and synchronize the time : Connect to the computer by USB interface → Open the DataLogger software → Click [Get] to get the instrument configuration → Pop-up the ok prompt window, click [OK] → set the instrument upper and lower limits alarming and interval logging → click [Sync Setting] synchronization settings.

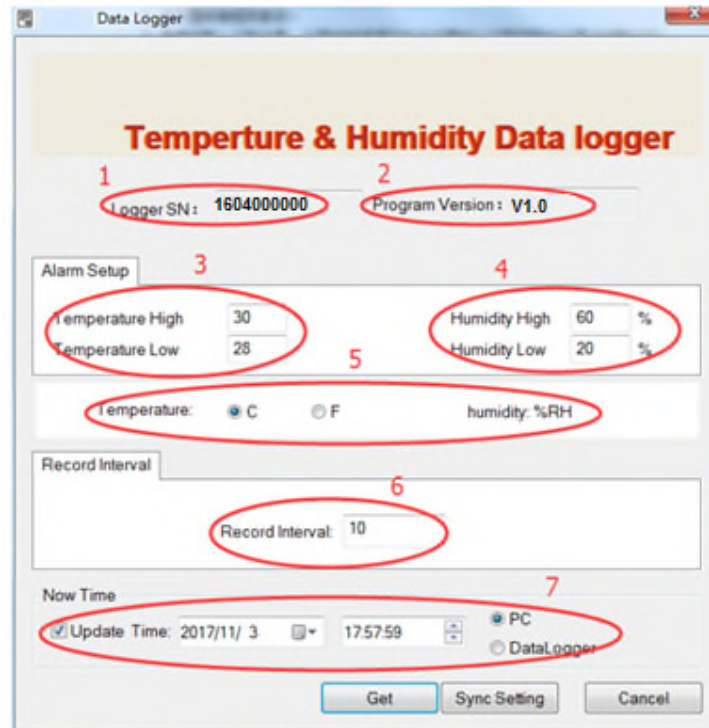


Figure 2-3 Data Logger Software interface

1. The serial number of the instrument: corresponding to the series number of label on the back of the instrument.
2. The program version of the instrument.
3. Set upper and lower limit temperature alarm: the measuring temperature of the instrument is not in the range of the upper and lower limits of this setting will be alarming.
4. Set upper and lower limit humidity alarm: the measuring humidity of the instrument is not in the range of the upper and lower limits of this setting will be alarming.
5. Display unit: select **[C]** option temperature display unit °C; select **[F]** option temperature display unit °F.
6. Set record interval: every record interval, the instrument records a piece of data in seconds, the set range is 5~43200S.
7. Check the "Update" option, the instrument synchronizes the computer time.

2.Instrument boot, enter calibration mode: After synchronizing time, the instrument is pulled out from the computer, press the OK button to power on, Two LED lights at the same time, the instrument enters the calibration mode, normal display real-time temperature, can

check the maximal value, minimum value, alarm lower limit and alarm upper limit, display temperature and humidity units on the top right of the screen, does not generate PDF documents. As shown in Figure 2-4:

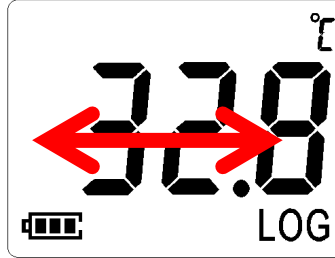
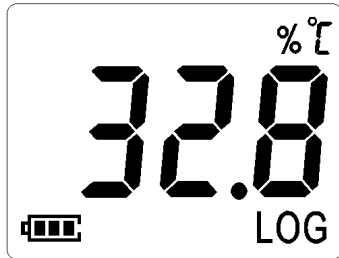


Figure 2-4 Calibration mode LCD display

Figure 2-5 Record mode LCD display

3. Instrument is power on again, record data: Press OK to turn off the instrument after entering the calibration mode. The instrument will turn on again and enter the record state. At this moment, the instrument starts to record the data and normally display temperature to generate the PDF document

4. View data and save data: let instrument USB interface directly connect to the computer, waiting for the generation of PDF documents (according to the quantity of data recorded, will take a different time), after generate the PDF document, "computer" will appeared a removable storage device. After opening this disk, a PDF file will appear. Click this file to read the data recorded by this instrument, and can copy and paste the PDF document to other computer disk.

Note 1: It is suggested to rename the PDF document according to actual needs after copying the PDF document.

Note 2: the recording capacity of this instrument is 12000 sets of data. After the data storage reaches the upper limit, the LCD temperature column will show "FUL" and the instrument has finished recording.

5. End use: This product is a one-time use, so the instrument power off or connect to the computer in the recording state and the instrument can't power on or can't be re-record after synchronized instrument setting, but can be connected to the computer to view and save the data.

2.3 PDF document description

1. PDF generation: After the instrument is connected to a computer, the PDF document will be generated. At this time, the temperature light will flash and the representative is

generating PDF. After the PDF is generated, the user can read the recorded PDF document from the instrument.

2.PDF document interface description:

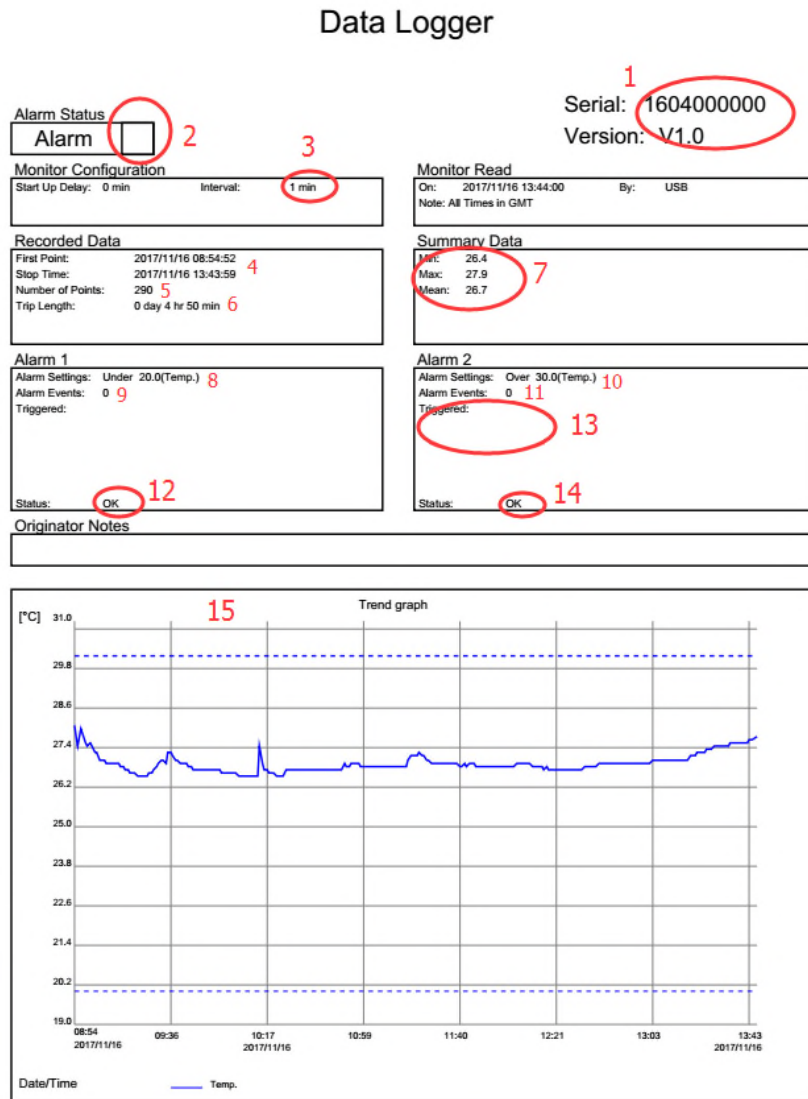


Figure 2-6 PDF Document Page 1

- 1) Instrument serial number and software version
- 2) Over limit alarm prompt: blank = no alarm, red = alarm.
- 3) Set the recording interval, unit: second

- 4) Instrument recording start and end time
- 5) Total number of data recorded
- 6) Record the total length of time
- 7) The maximum, minimum and average temperature recorded by the instrument.
- 8) Set the lower limit of temperature
- 9) The quantity of temperature exceed set lower limit
- 10) Set the upper limit of temperature
- 11) The quantity of temperature exceed set upper limit
- 12) Excess the Min value in over limit state: No over limit record display **OK**, there is over limit record shows **Alarm**.
- 13) The first excess lower limit and the last excess lower limit time
- 14) Excess the Max value in over limit state: No over limit record display **OK**, there is over limit record shows **Alarm**.
- 15) Temperature analysis curve: **blue curve for the temperature.**

Temperature

Date	Time	°C	Date	Time	°C	Date	Time	°C	Date	Time	°C	Date	Time	°C	Date	Time	°C
2017/11/16	08:54:52	27.9	2017/11/16	10:30:52	26.6	2017/11/16	12:06:52	26.8	2017/11/16	13:42:52	27.5						
2017/11/16	08:55:52	27.6	2017/11/16	10:31:52	26.6	2017/11/16	12:07:52	26.8	2017/11/16	13:43:52	27.6						
2017/11/16	08:56:52	27.3	2017/11/16	10:32:52	26.6	2017/11/16	12:08:52	26.8									
2017/11/16	08:57:52	27.8	2017/11/16	10:33:52	26.6	2017/11/16	12:09:52	26.7									
2017/11/16	08:58:52	27.7	2017/11/16	10:34:52	26.6	2017/11/16	12:10:52	26.7									
2017/11/16	08:59:52	27.4	2017/11/16	10:35:52	26.6	2017/11/16	12:11:52	26.7									
2017/11/16	09:00:52	27.3	2017/11/16	10:36:52	26.6	2017/11/16	12:12:52	26.7									
2017/11/16	09:01:52	27.4	2017/11/16	10:37:52	26.6	2017/11/16	12:13:52	26.7									
2017/11/16	09:02:52	27.3	2017/11/16	10:38:52	26.6	2017/11/16	12:14:52	26.6									
2017/11/16	09:03:52	27.1	2017/11/16	10:39:52	26.6	2017/11/16	12:15:52	26.7									
2017/11/16	09:04:52	27.1	2017/11/16	10:40:52	26.6	2017/11/16	12:16:52	26.6									
2017/11/16	09:05:52	26.9	2017/11/16	10:41:52	26.6	2017/11/16	12:17:52	26.6									
2017/11/16	09:06:52	26.9	2017/11/16	10:42:52	26.6	2017/11/16	12:18:52	26.6									
2017/11/16	09:07:52	26.9	2017/11/16	10:43:52	26.6	2017/11/16	12:19:52	26.6									
2017/11/16	09:08:52	26.8	2017/11/16	10:44:52	26.6	2017/11/16	12:20:52	26.6									
2017/11/16	09:09:52	26.8	2017/11/16	10:45:52	26.6	2017/11/16	12:21:52	26.6									
2017/11/16	09:10:52	26.8	2017/11/16	10:46:52	26.6	2017/11/16	12:22:52	26.6									
2017/11/16	09:11:52	26.8	2017/11/16	10:47:52	26.6	2017/11/16	12:23:52	26.6									
2017/11/16	09:12:52	26.8	2017/11/16	10:48:52	26.6	2017/11/16	12:24:52	26.6									
2017/11/16	09:13:52	26.8	2017/11/16	10:49:52	26.8	2017/11/16	12:25:52	26.6									
2017/11/16	09:14:52	26.7	2017/11/16	10:50:52	26.7	2017/11/16	12:26:52	26.6									
2017/11/16	09:15:52	26.7	2017/11/16	10:51:52	26.7	2017/11/16	12:27:52	26.6									
2017/11/16	09:16:52	26.6	2017/11/16	10:52:52	26.8	2017/11/16	12:28:52	26.6									
2017/11/16	09:17:52	26.6	2017/11/16	10:53:52	26.8	2017/11/16	12:29:52	26.6									
2017/11/16	09:18:52	26.5	2017/11/16	10:54:52	26.8	2017/11/16	12:30:52	26.6									
2017/11/16	09:19:52	26.5	2017/11/16	10:55:52	26.8	2017/11/16	12:31:52	26.7									
2017/11/16	09:20:52	26.5	2017/11/16	10:56:52	26.7	2017/11/16	12:32:52	26.7									
2017/11/16	09:21:52	26.4	2017/11/16	10:57:52	26.7	2017/11/16	12:33:52	26.7									

Figure 2-6 PDF Document Page 2

Data display: temperature over limit display blue, if not display black.

Chapter III Precautions

1. The PDF generation will take a certain amount of time. During this time, the instrument will not be pulled out from the port, otherwise the data will be lost.
2. After the instrument is connected to the computer, the instrument will be automatically ended the recording function and shutdown.
3. Button operation will increase the power consumption of the instrument, and avoid a large number of useless operations on the keys when necessary.
4. It can not be used for the second time if the instrument power off when recording the data, so please do not turn off or connect the machine to the computer during the recording process.

(VER 1.0)